

# Assembly Instructions

## Fanfare Peninsula Adjustable Table

May 2002

www.unicor.gov  
800.827.3168

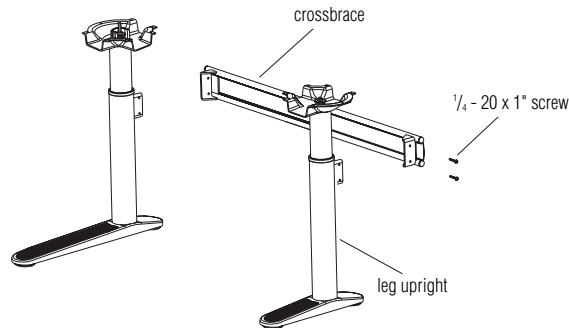


Figure 1

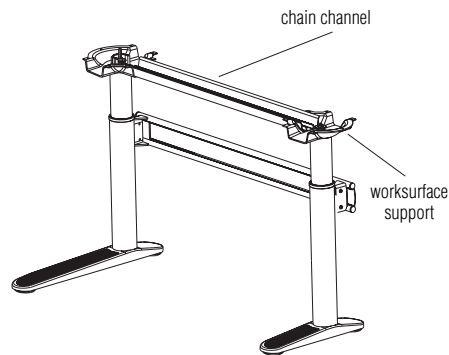


Figure 2



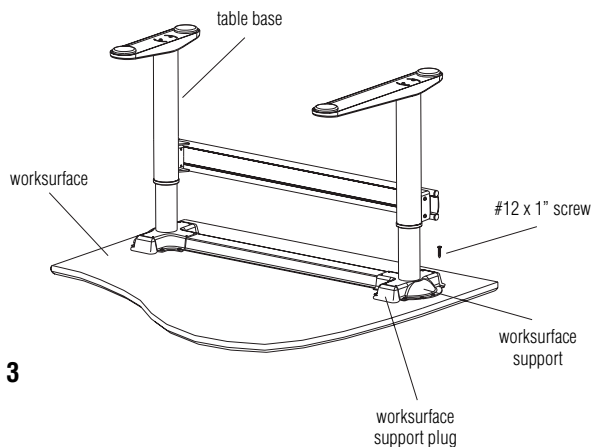


Figure 3

### HARDWARE



#12 x 1" Screw



1/4-20 x 1" Screw

1. Remove base from packaging material.
2. With one leg upright supported, move legs apart to attach crossbrace (Figure 1).
3. Attach the crossbrace to the leg uprights with four 1/4-20 x 1" screws (Figure 1).
4. Slide the chain channel into the opening in each worksurface support (Figure 2).
5. Remove the plastic sprockets by pulling out the cotter pins and sliding the sprockets over the hex shaft. Engage the sprockets into the chain. Reinstall the sprockets. Insert the cotter pins and separate the ends to secure.
6. Place the worksurface upside down on a clean, soft surface to prevent scratching. Invert the table base on the worksurface, taking care to align the holes with the pre-drilled holes in the worksurface. Secure the table bases to worksurface with fourteen #12 x 1" screws. Tap in four worksurface support plugs (Figure 3).



U.S. Department of Justice  
**UNICOR**  
Federal Prison Industries, Inc.



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be checked periodically after assembly. **Failure to assemble properly, or to secure parts may result in assembly failure and injury.** Illustrations and specifications are based on current product information at the time of this printing.


# Fanfare Peninsula Adjustable Table - Assembly Instructions



Assemble units as described herein only. To do otherwise may result in instability. All screws, nuts and bolts must be tightened securely and must be checked periodically after assembly. Failure to assemble properly, or to secure parts may result in assembly failure and injury.

7. Carefully turn worksurface/base assembly upright and adjust worksurface to desired height with hand crank (Figure 4).

8. The four glides on the table base feet may be adjusted to accommodate varying floor surfaces. Lift the base off the floor and turn the glide clockwise or counter clockwise to adjust.

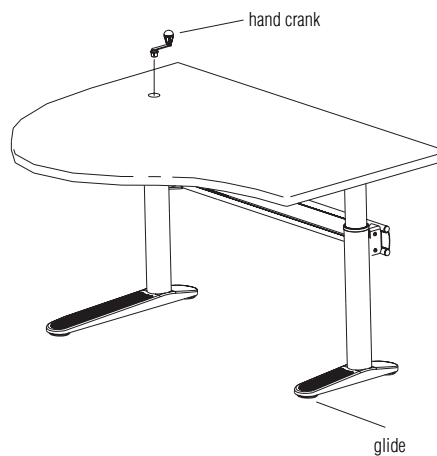

**Figure 4**